




DV-C6280

DVD / VIDEO CD / CD PLAYER




OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

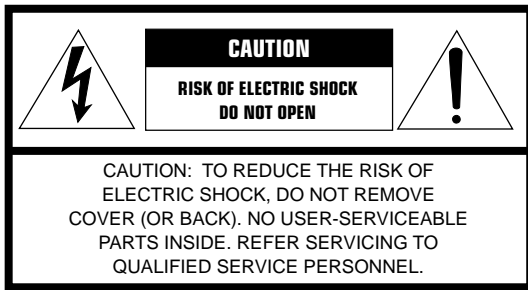

- Explanation of Graphical Symbols

 

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC INFORMATION (for US customers only)

1. **IMPORTANT NOTICE : DO NOT MODIFY THIS UNIT!**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. **IMPORTANT :** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. **NOTE :** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

We Want You Listening For A Lifetime

YAMAHA and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, YAMAHA and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



IMPORTANT

Please record the serial number of this unit in the space below.

MODEL:

Serial No.:

The serial number is located on the rear of the unit. Retain this Owner's Manual in a safe place for future reference.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: READ THIS BEFORE OPERATING YOUR UNIT.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this unit in a well ventilated, cool, dry, and clean place with at least 5 cm above, behind and on the both sides of this unit - away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold.
- 3 Position this unit away from other electrical appliances, motors and transformers to avoid humming sounds, do not place this unit where it may get exposed to rain or any kind of liquid to prevent fire or electrical shock.
- 4 Avoid extreme temperature swings or excessive use of humidifier in the room where this unit is installed to prevent condensation inside this unit, which may cause an electrical shock, fire damage to this unit, and/or personal injury.
- 5 Do not cover this unit with a newspaper, a tablecloth, a curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit and/or personal injury.
- 6 Avoid installing this unit in a place where foreign objects and liquid might fall. It might cause a fire, damage to this unit and/or personal injury. Do not place the following objects on this unit:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e., candles), as they may cause fire, damage to this unit and/or personal injury.
 - Containers with liquid in them, as they may cause an electrical shock to the user and/or damage to this unit.
- 7 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 8 Do not use force on switches, controls or connection cables. Never pull the cables when disconnecting them.
- 9 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may result in fire or other accidents. YAMAHA will not be held responsible for any damage resulting from the use of this unit with a voltage other than that specified.
- 10 Do not attempt to clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 11 Disconnect the power cord from the wall outlet when not planning to use this unit for a long period of time, or during an electrical storm, as they may cause damage by lightning.
- 12 Do not attempt to modify or fix this unit. Contact the qualified YAMAHA service personnel when any service is needed. Cabinet should never be opened for any reasons.
- 13 Be sure to read 'TROUBLESHOOTING' section regarding common operating errors before concluding that this unit is faulty.

DANGER

Visible laser radiation when open. Avoid direct exposure to beam.

When this unit is plugged to the wall outlet, do not place your eyes close to the opening of the disc tray and other openings to look into inside.

 
Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

This unit is designed for home use only. Do not use this unit for business purposes.

Be sure to place this unit on a level surface. If not so, this unit will fail to work normally at the PLAYXCHANGE operation and cause damage to the disc(s) and this unit itself.

Caution for moving this unit

- When moving this unit, first remove all discs from the disc table and close the table by pressing the **OPEN/CLOSE** button, and then switch off the power after you confirm that the front panel display indicates as follows.



Never switch off the power if the front panel display is not pictured as above, otherwise the unit will break down during moving because the internal mechanism is not locked.

- When moving this unit, be sure to first disconnect the power cord from the AC outlet and disconnect all cords connecting this unit to other equipment.

Voltage selector [General model]

The voltage selector on the rear panel of this unit must be set for your local main voltage BEFORE plugging into the AC power supply. Voltages are 110/120/220/240 V AC, 50/60 Hz.

FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.

This Class B digital apparatus complies with Canadian ICES-003.

FEATURES

- 5-Disc Auto-changer for playing DVD-Video, audio CD and Video CD
- PLAYXCHANGE; Disc Changing Capability while playing another
- 1 OPTICAL and 1 COAXIAL Digital Outputs for Dolby Digital, DTS, MPEG and Linear PCM
- 96 kHz, 24 Bit Audio DAC for high sound quality
- Compatible with almost all features of DVD discs (Multi-angle, Multi-language, Parental control, etc.)
- Easy Operation through On-screen Menu (Graphical User Interface)
- Multi-speed Playback Capability
- Component Video [U.S.A, Canada, Australia and General models], S-Video Outputs for high picture quality

CONTENTS

INTRODUCTION

FEATURES	1
GETTING STARTED	2
Checking the Package Contents	2
Disc Information	2
CONTROLS AND FUNCTIONS	4
Front Panel/Remote Control	4
Display	6

PREPARATION

REMOTE CONTROL	7
Installing Batteries in the Remote Control ...	7
Battery Replacement	7
Using the Remote Control	7
CONNECTIONS	8
Notes about Audio Connections	8
Digital Terminals	9
Analog Terminals	9
Video Terminals	10
Remote Control in/out Terminals	
[U.S.A. and Canada models]	11

PLAYBACK

BASIC OPERATION	12
Before Starting Playback	12
Playing a Disc	13
Search (to advance or reverse playback	
rapidly)	14
Skipping Chapters / Tracks	14
Still Picture (to pause playback)	15
Frame Advance / Reverse	15
Slow-Motion Play	15
SELECTING PLAY MODES	16
Repeat Play	16
A-B Repeat	17
Random-Sequence Play [VCD] [CD]	17
Program Play [VCD] [CD]	18

ADVANCED FEATURES	19
Menu Screen [DVD]	19
Playback Control [VCD]	19
Switching Audio Tracks [DVD] [VCD]	20
Switching Subtitle Tracks [DVD]	21
Switching Camera Angles	21
ON-SCREEN MENU	22
Operating On-Screen Menu	22
Disc Information Screen	23
Player's Information Screen	24
Shuttle Screen	24

SETUP MENU

SETUP MENU	25
Operating the Setup Menu	25
DESCRIPTION OF EACH ITEM	26
1. Disc Language [DVD]	26
2. Ratings [DVD]	27
3. Menu Language	28
4. On-Screen Messages	28
5. FL Display	28
6. TV Aspect	28
7. Digital Audio Output	29
9. Other Settings	30

APPENDIX

TROUBLESHOOTING	31
GLOSSARY	33
LANGUAGE CODE LIST	33
SPECIFICATIONS	34



 
Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992 – 1997 Dolby Laboratories, Inc. All rights reserved.

GETTING STARTED


Checking the Package Contents

Check that the following items are included in your package.


Remote control



Batteries (AA, R06, UM-3)

 

RCA pin cable (audio/video)

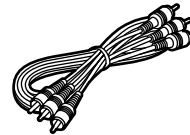

Disc Information

This DVD changer is designed for use with following types of disc only. Never attempt to load any other type of disc into this unit because it may damage this unit.

Type of disc	DVD-Video 8 cm disc/12 cm disc	Video CD 8 cm disc/12 cm disc	Audio CD 8 cm disc/12 cm disc
Mark printed on the disc			

Notes













- This unit is not compatible with CD-R, CD-RW, Photo-CD, CD-ROM, DVD-Audio, DVD-ROM, DVD-RAM, SVCD, CDV, etc.
- Do not use any non standard shaped discs (heart, etc.).
- Do not use disc with tape, seals, or paste on it, damage to the unit may result.
- To reproduce DTS sound, it is necessary to connect a DTS decoder to this unit.
- Some DVD and VCD features described in this manual may not be available or may operate in a different way because they are subject to software producer's design. Check each disc's instruction.

Example:

'⏮' appears when you press the skip buttons to move to the next section.


■ Region management information **DVD**

This DVD player is designed to meet DVD standard that supports region management system. Check the regional code number marked on the disc packages. If the number does not match this unit's region number (see the below table or the back of this unit), this unit refuses to play that disc.


Model	Region number of this unit	Discs can be played
U.S.A. and Canada models		 ,  or a mark which includes the region number '1'.
Europe and U.K. models		 ,  or a mark which includes the region number '2'.
General model		 ,  or a mark which includes the region number '3'.
Australia model		 ,  or a mark which includes the region number '4'.

■ Notes about handling discs

- Hold discs by touching only the edges or center hole.

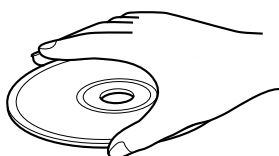


- When a disc is not currently being loaded on the disc tray, store it in an appropriate case.
- Playback of discs is generally not affected by small particles of dust or fingerprints on their playing surface. Even so, they should be kept clean. Wipe by using a clean, dry cloth. Do not wipe with a circular motion; wipe straight outward from the center.

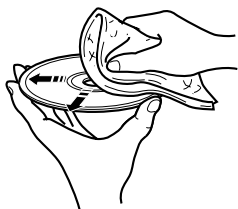

- Do not try to clean the disc's surface by using any type of disc cleaner, record spray, anti-static spray or liquid, or any other chemical-based liquid, because such substances might irreparably damage the disc's surface.
- Do not expose discs to direct sunlight, high temperature or high humidity for a long period of time, because these might warp or otherwise damage the disc.


No!

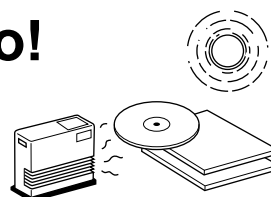


CONTROLS AND FUNCTIONS

Front Panel/Remote Control

Front Panel

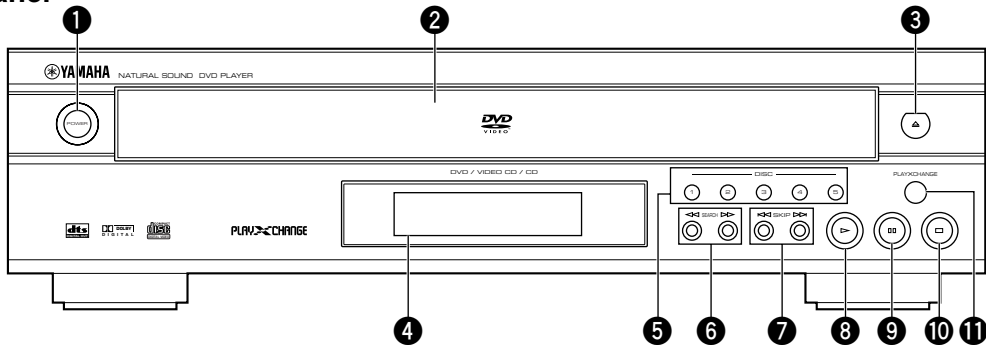

Remote Control

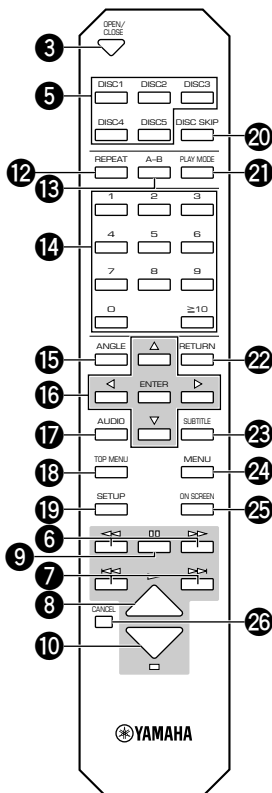

1 POWER (p.13)

Press to turn the power on and off.

2 Disc tray (p.13)

Up to 5 discs can be loaded on this tray.

3 open/close (OPEN/CLOSE) (p.13)

Press to open and close the disc tray.

4 Display panel

See p.6.

5 DISC (1,2,3,4,5) (p.13)

Press to play the disc loaded on the guide of the corresponding number.

6 <<, >> (SEARCH) (p.14)

Use to advance or reverse playback rapidly.

7 <<<, >>> (SKIP) (p.14)

>>>: Press to skip to the beginning of the next chapter (track).

<<<: Press to skip to the beginning of the currently played chapter (track).

8 > (PLAY) (p.13)

Press to start playback.

9 □ (PAUSE) (p.15)

Press to pause.

10 □ (STOP) (p.13)

Press to stop playback.

11 PLAYXCHANGE (p.14)

Press to open and close the disc tray during playback. You can exchange discs other than the one being played.

12 REPEAT (p.16)

Press to repeat playback of a title, chapter, track, etc.

13 A-B (p.17)

Press to specify two points and to repeat playback between them.

14 Numeric buttons

Use to select a title, chapter, track, etc.

15 ANGLE

Press to change angles when the scene of the disc being played contains two or more angles.

16 Cursor buttons, ENTER

Use to select and determine an item on menu screen, etc.

17 AUDIO (p.20)

Press to change audio track language and/or format when the disc being played contains two or more different audio tracks.

18 TOP MENU

Press to go to the initial screen when operating in the menu screen.

19 SETUP (p.25)

Press to call up SETUP MENU screen.

20 DISC SKIP

Press to select another disc.

21 PLAY MODE (p.17, 18)

Press to switch among random play, program play, and normal play.

22 RETURN (p.25)

Press to go back to the previous screen when operating in the menu screen.

23 SUBTITLE (p.21)

Press to change subtitles when the disc being played contains several subtitles.

24 MENU (p.19)

Press to call up menu screen contained in the disc.


25 ON SCREEN (p.22)

Press to turn the on-screen menu (GUI icons) on and off on the video monitor.

26 CANCEL

Press to cancel a specific mode or a setting.

Display

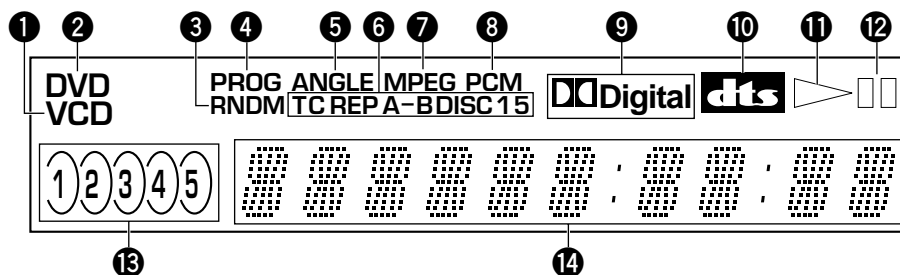

1 VCD

VCD lights up when a Video CD is selected and CD lights up when a CD is selected.

2 DVD

Lights up when a DVD is selected.

3 RNDM

Lights up during random-sequence play.

4 PROG

Lights up during program play.

5 ANGLE

Lights up when the scene currently played contains different angle(s).

6 Repeat mode indicator

- T and REP light up when repeating a title or a track.
- C and REP light up when repeating a chapter.
- REP and A-B light up when repeating between the two points you have specified.
- REP and DISC 1 light up when repeating the currently selected disc.
- REP and DISC 5 light up when repeating all the discs loaded on the disc tray.

7 MPEG DVD

Lights up when an audio track encoded with MPEG format is selected.

8 PCM DVD

Lights up when an audio track encoded with Linear PCM format is selected.

9 Dolby Digital DVD

Lights up when an audio track encoded with Dolby digital format is selected.

10 DTS DVD CD

Lights up when an audio track encoded with DTS format is selected.

11 Play/Pause

Lights up during playback.

12 Stop

Lights up while playback is paused.

13 Disc Tray


One of these numbers lights up to show the currently selected disc, which is loaded on the guide of the corresponding number.

14 Multi-information display

Shows various information such as title, chapter or track number, elapsed playing time etc.

REMOTE CONTROL

Installing Batteries in the Remote Control

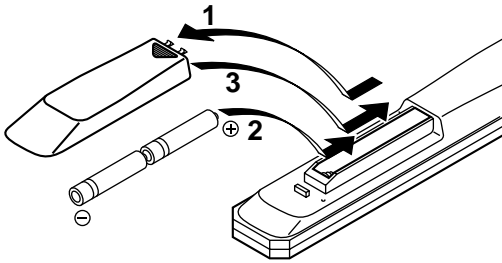

- 1** Turn the remote control over and slide the battery compartment cover in the direction of the arrow.
- 2** Insert the batteries (AA, R06, UM-3 type) according to the polarity markings on the inside of the battery compartment.
- 3** Close the battery compartment cover.


Battery Replacement

If the remote control operates only when it is close to the unit, the batteries are weak. Replace all the batteries with new ones.

Notes

- Use only AA, R06 or UM-3 batteries for replacement.
- Be sure the battery polarity is correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control will not be used for an extended period of time.
- If the batteries have leaked, dispose of them immediately. Avoid touching the leaked material or letting it come into contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.

Using the Remote Control

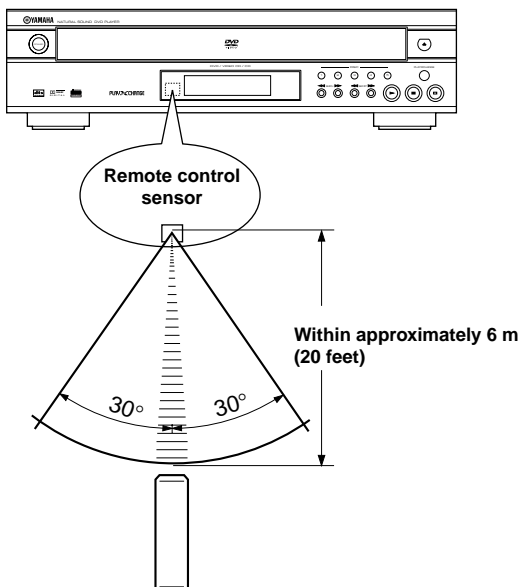

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor during operation. When the sensor is covered or there is a large object between the remote control and the sensor, the sensor cannot receive signals. The sensor may not be able to receive signals properly when it is exposed to direct sunlight or a strong artificial light (such as a fluorescent or strobe light). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

Notes


- Handle the remote control with care.
- Do not spill water, tea or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following conditions:
 - high humidity or temperature such as near a heater, stove or bath;
 - dusty places; or
 - extremely low temperature.

CONNECTIONS

CAUTION

- Never connect this unit and other equipment to power supply until all connections have been completed.

Be sure all connections are made correctly, observing the color-coding of terminals of both this unit and the equipment to be connected. Also refer to the instructions of the equipment to be connected.

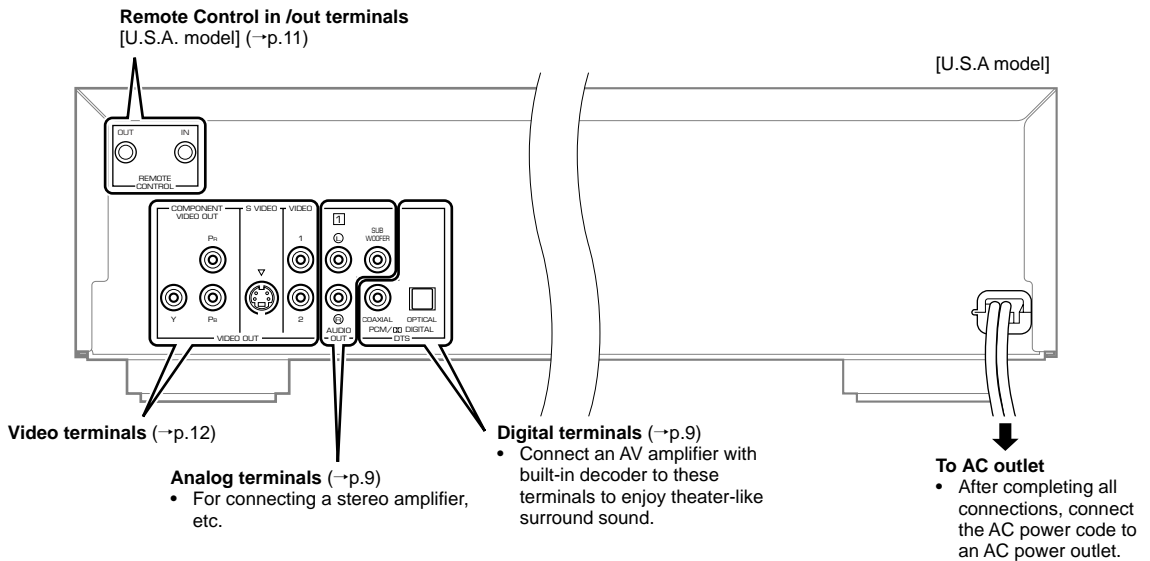

Notes about Audio Connections

Select the correct output format at '7 Digital Audio Output' on the SETUP MENU in accordance with your AV system.

Equipment to be connected	Appropriate settings at '7 Digital Audio Output'			
	1. PCM Down Conversion*	2. Dolby Digital	3. DTS Digital Surround	4. MPEG (Europe, U.K. and Australia models)
AV amplifier with digital input(s) and Dolby Digital/DTS/MPEG decoder	Yes	Bitstream	Bitstream	Bitstream
AV amplifier with digital input(s) and Dolby Digital/ MPEG*1 decoder (without DTS decoder)	Yes	Bitstream	Off**	Bitstream
AV amplifier with Dolby Prologic decoder	Yes	PCM***	Off**	PCM***
Stereo amplifier without digital input	No	PCM***	Off**	PCM***

* Select 'No' when the connected equipment has 96-kHz/24-bit D/A converter to enjoy high-fidelity audio. However, no digital signal is output if the disc you play is copyright-protected.


** No signal is output from this unit's digital audio output terminal.

*** Multi-channel signals are downmixed to 2-channels Linear PCM and then output from both digital and analog output terminals.


- See p.29 for further information.

Digital Terminals

[U.S.A. model]

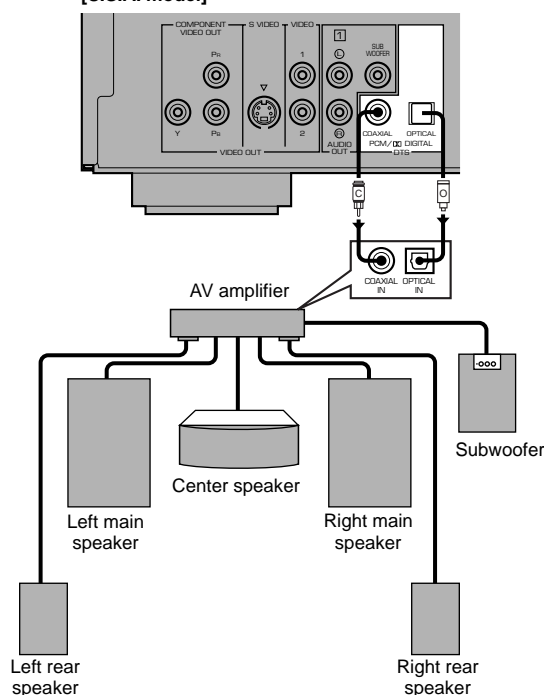

This unit has COAXIAL and OPTICAL digital output terminals. Connect one or both of them to your AV amplifier equipped with Dolby digital, DTS, or MPEG decoder using each specific cable (separate purchase).

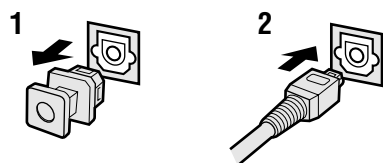


■ When connecting the optical fiber cable

- Remove the cover when using the OPTICAL terminal. Keep the cover and attach it when the terminal is not being used to protect it from dust.
- Bend an optical cable as little as possible.
- Use commercially available optical fiber cable that conforms to EIA standards. Other cables may not function correctly.

Analog Terminals

[U.S.A. model]

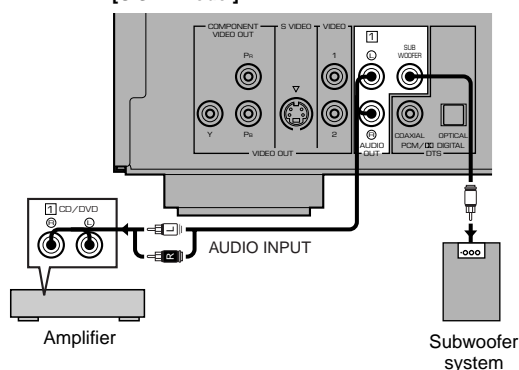


Connect AUDIO OUT L (left) and R (right) terminals of this unit to corresponding input terminals of your audio equipment such as stereo amplifier.

If the audio equipment does not have subwoofer output, you can use this unit's SUBWOOFER terminal to connect your subwoofer system (subwoofer with built-in amplifier). In that case, set the 'subwoofer' item on the on-screen menu to 'ON' (→p.24).

Video Terminals

[U.S.A. model]

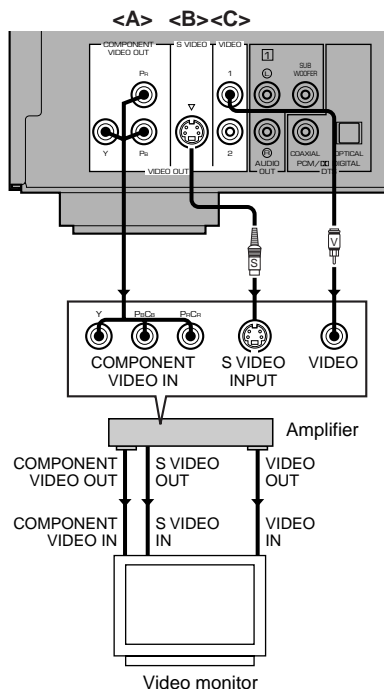

If your AV amplifier has video output terminals, connect your amplifier (and then to your video monitor) so that you can use one video monitor for several different video sources (LD, VCR etc.) by simply switching the input source selector of your amplifier.

This unit has three types of video output terminals. Use one of them in accordance with the input terminals of the equipment to be connected.

Note

- Do not connect this unit to a video monitor through a video cassette recorder. If you do so, the picture may not be played back properly due to the copyright protection technology incorporated in this unit.

■ Component Video terminal <A>

U.S.A, Canada, Australia and General models

Component video connection achieves high fidelity in reproducing colors (better performance than S-video connection), separating video signal into luminance (Y, terminal color-coded as green), and color difference (Pb, blue/Pr, red). Use commercially available coaxial cables. Amplifier (and Video monitor) with component input is required. Observe the color of each terminal when connecting. If your amplifier does not have component output terminals, connecting this unit's component output directly to your video monitor's component input can reproduce better video image.

Note

- Do not connect this unit's COMPONENT VIDEO OUT terminals to component video input terminals special for HD (High-Definition) TV.

■ S-Video terminal


S (separate) video connection achieves a clearer picture than composite video connection by separating color and luminance when transmitting signals. Use commercially available S-video cable. Amplifier (and Video monitor) with S-video input is required.

■ Composite Video terminal (1, 2) <C>

Use RCA video cable supplied with this unit when connecting this unit to a video monitor.

VIDEO 1, 2 terminals of VIDEO OUT output the same signal. You can connect one to your amplifier's input using supplied RCA cable, and the other to another amplifier or a video monitor.

[U. K. model]

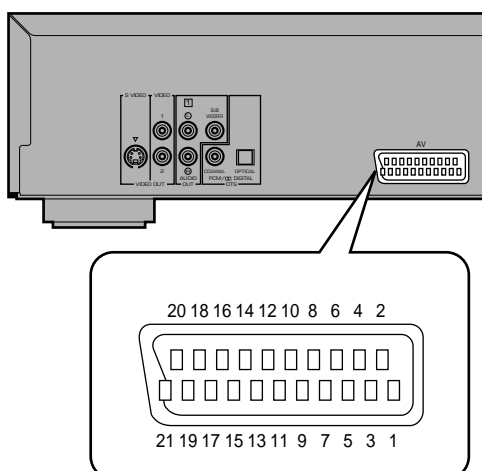

■ 21-pin SCART terminal

U.K. and Europe models

If your video monitor has only 21-pin terminal for video input, and you want to connect it directly to this unit, you can use this unit's 21-pin SCART output terminal (this terminal does not output RGB component signals).


Pin no.	Video	S video
1	Audio output (R)	Audio output (R)
3	Audio output (L)	Audio output (L)
4	Audio GND	Audio GND
8	Switching voltage	Switching voltage
13	No connection	S video (C) output GND
14	Blanking GND	Blanking GND
15	No connection	S video (C) output
16	Blanking	Blanking
17	Video output GND	S video (Y) output GND
18	Video input GND	Video input GND
19	Video output	S video (Y) output
21	GND	GND

(Pin no.2, 5 to7, 9 to 12, 20: no connection)

- You can select 'Video' or 'S-Video' at the '6 AV Output' on the setup menu '9.Other settings'. See p.30.

Remote Control in/out Terminals [U.S.A. and Canada models]

[U.S.A. model]

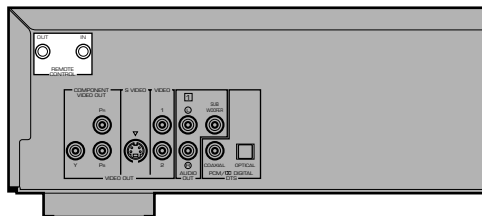

These terminals are used for custom installation system that transmits remote control signals via cables. Connect this unit's REMOTE CONTROL IN to the Remote control output of the control unit of your system.

By connecting this unit's REMOTE CONTROL OUT to another piece of equipment's Remote control input terminal, you can also operate that equipment with the system remote control.

BASIC OPERATION

Before Starting Playback

To play a disc properly, you need to adjust the formats of audio and video signals output from this unit in accordance with the equipment connected to this unit. See p.25 to 30 for more detailed information.

CAUTION

- Be sure to select the appropriate positions at '7 Digital Audio Output' on the SETUP MENU. Otherwise, there may be a case where digital signal which the connected equipment cannot process will be output and its noise could damage your ears and your speakers.

6 TV Aspect

Type of the connected video monitor	Appropriate setting
Conventional type	1. 4:3
Widescreen type	2. 16:9

7 Digital Audio Output

- To output digital signal from this unit

The connected audio equipment has	Corresponding item	Appropriate setting
96-kHz/24-bit D/A converter	1. PCM Down Conversion	No
Dolby Digital decoder	2. Dolby Digital	Bitstream
DTS decoder	3. DTS	Bitstream
MPEG decoder	4. MPEG [Europe and U.K. models only]	Bitstream

Notes



- When you select 'No' at 1. PCM Down Conversion, digital signal may not be output depending on the disc you play.
- Make sure to connect digital terminals of both this unit and the audio equipment as instructed on page 9.

- To output analog signal from this unit


Item in '7 Digital Audio Output'	Appropriate setting
1. PCM Down Conversion	No
2. Dolby Digital	PCM
3. DTS	Off
4. MPEG [Europe and U.K. models only]	PCM

- Adjust some other settings such as on-screen display language, ratings, etc. as necessary. See SETUP MENU (p.25 to 30) for detail.


Playing a Disc

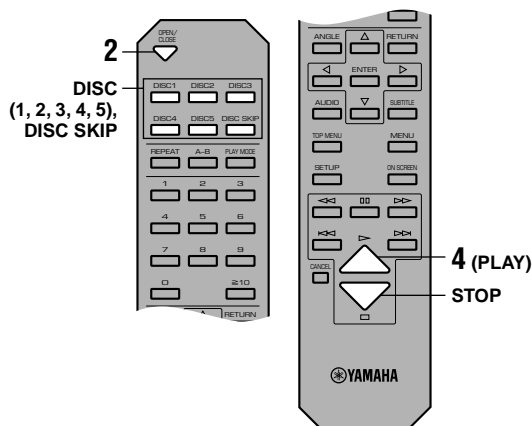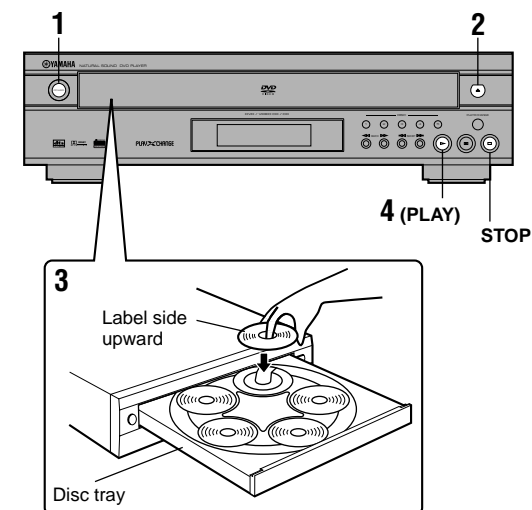

U.S.A., Canada and General models

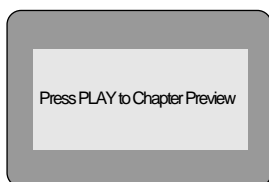

Europe, U.K. and Australia models

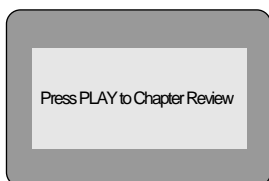

Preparation

Select DVD as the input source on your AV amplifier.

1 Press POWER to turn the power on.

2 Press OPEN/CLOSE (or \triangle) to open the disc tray.

3 Load discs.

Use the disc guides (numbered, 1 to 5) to align the discs correctly.

4 Press \triangleright (PLAY).

The disc tray closes and playback starts. This unit plays all discs on the tray in sequence.



- If necessary, select a desired disc using DISC SKIP or one of the DISC (1, 2, 3, 4 or 5) buttons.
- When a menu screen appears:

DVD See 'Operating Menu Screen' in p.19.

VCD See 'Playback Control' in p.19.

Note

- When this unit finishes playing a DVD, this unit stops playback or shows the menu screen and does not start playing the next disc.

To stop playback

Press \square (STOP).

Resume function

This unit memorizes where \square (STOP) was pressed (\blacktriangleright indicator flashes on the display). When you press \triangleright (PLAY) in this status, playback resumes from where it was stopped. To clear the memory, press \square (STOP) once more so that the \blacktriangleright indicator goes off.

Notes

- This function may not work with some discs or on some part of a disc.
- If you turn the power off, resume function is cleared.

Chapter review function [DVD]


This function plays the first few seconds of each chapter from the beginning of the title up to where the operation was stopped before starting normal playback so that you can review previous chapters.

1 Press \triangleright (PLAY) while the message as illustrated on the left is displayed on the screen.


2 Press \triangleright (PLAY) again while the message is displayed on the screen.

Notes

- This function may not work with some DVDs.
- Canceling resume function will also clear the chapter review function.

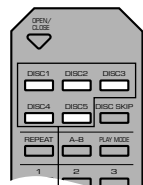

DISC
(1, 2, 3, 4, 5)

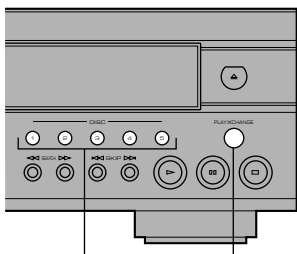

DISC (1, 2, 3, 4, 5) PLAYXCHANGE

■ After operation

When this unit is not in use, remove discs and press POWER.

■ To select a specific disc



Press DISC (1, 2, 3, 4 or 5).

Playxchange

By pressing PLAYXCHANGE, you can open the disc tray and load or replace discs without interrupting play.

However, never load a disc on the guide half hidden inside the unit because the disc currently being played is to be placed there.

Search (to advance or reverse playback rapidly)

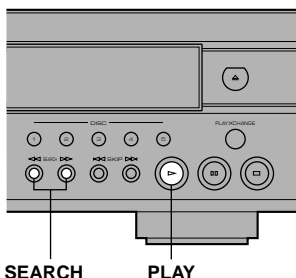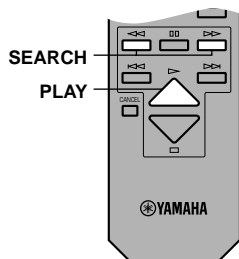


Press SEARCH \gg (or \ll) to search forward (or backward) during playback.

- To return to normal play, press \triangleright (PLAY).



- Pressing the button repeatedly increases searching speed.

Skipping Chapters / Tracks

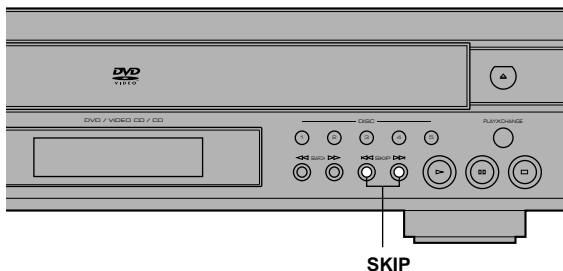

SKIP

Press SKIP \gg to skip forward or \ll to skip backward. Press once for each chapter (track) to be skipped.

Note

- When playing a VCD with playback control, skip operation may not function as described above.


■ To select a specific track **VCD** **CD**

Enter a desired track number using numeric buttons.

To select a two-digit number, press ≥ 10 and then enter the upper figure and the last figure successively.

Example (to select track 17):


- 1 Press ≥ 10
- 2 Press [1].
- 3 Press [7].

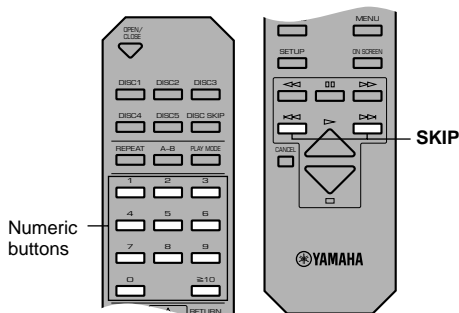

Numeric buttons

SKIP


Still Picture (to pause playback)

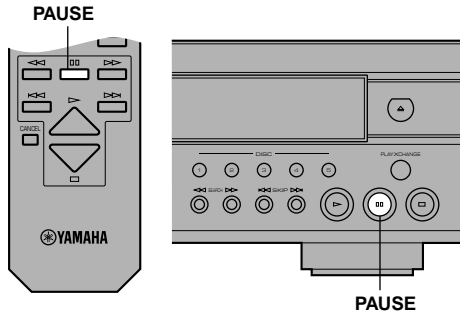

Press **PAUSE**.

- To resume play, press **PLAY**.

Frame Advance / Reverse

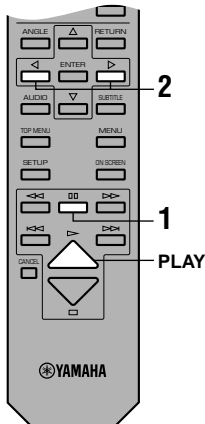


DVD VCD

- 1 Press **PAUSE** during playback.
- 2 Press the cursor buttons [**←**, **→**].

Each press advances (or reverses) still picture by one frame.

- To return to normal play, press **PLAY**.

Slow-Motion Play

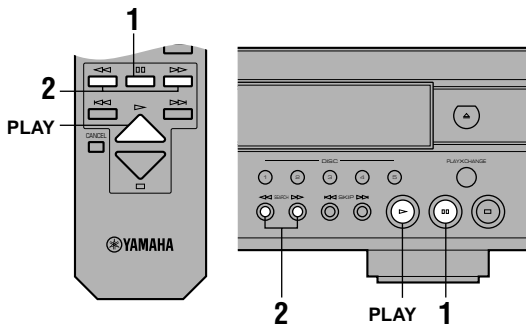

DVD VCD

- 1 Press **PAUSE** during playback.
- 2 Press [**⏮**, **⏭**].

- To return to normal play, press **PLAY**.



- Pressing the button repeatedly increases the speed.